Maxel

LIMITED WARRANTY

MAXEL FISHING TACKLE CO., LTD. warrants its products to be free from defects in materials and workmanship for a period of five years from the date of purchase.

This warranty does not cover damage or malfunctions caused by accident, abuse or normal expected wear.

For the fastest repair service and spare parts, please contact your local Maxel dealers. Please send it insured and include a short note describing the service you want. All shipping and insurance costs and transportation arrangements will be borne by you and are your responsibility. We will repair or replace the Product, at our option, without further cost to you, (including free return transportation and insurance). If, however, the repair is not covered by the provisions of this warranty, your Maxel Product will be repaired and returned to you at a reasonable charge for labor, parts and return transportation and insurance.

This warranty does not cover the drag washers and ball bearings of Maxel reels. This warranty does not cover the damages caused by transport or the incorrect use of the product. This warranty is not valid whenever the product has been tampered with or presents signs of unauthorized repair.



CARE AND LUBRICATION

Maxel reels are quality manufactured with high technology and corrosion resistant materials, however, regular inspections and the following operations will ensure ultimate performance throughout many seasons.

- 1) After each fishing trip the reel should be cleaned. First wipe or wash the reel with fresh water to remove any accumulated salt deposits. Clean it off with a damp sponge, dry it with a clean cloth, and store it in a ventilated dry place. Use the soft neoprene bag provided with your Maxel reels for storage;
- 2) Avoid contact with salt water as much as possible. Salt water can accumulate inside the internal parts;
- 3) Every time that an internal cleaning is to be performed, the mechanical components must be re-lubricated with grease. Be sure to grease threads on all external screws so that will make the screws much easier to remove when servicing the reels again. Do not over lubricate! Make sure that all mechanical parts are correctly re-assembled and that all screws are tightly screwed in;
- 4) Maxel recommends using our reel schematics as a guide when servicing and organize the parts in the order in which you remove them ;
- 5) When the reel is not to be used for a long time, the drag lever must be set in the Free position. This will take off pressure on various drag components and allow internal parts to dry better if they get wet; Always store your Maxel two speed reel in low gear position.
- 6) Periodically check your Maxel reel for any loose screws or fittings. Depending upon use, your reel should be inspected at least once every season.